# SECTION 5 SERVICE

#### 5.1 GENERAL

This section provides calibration, troubleshooting, and removal and replacement instructions for the Model C100 and C200 Incubators.

IMPORTANT: It should be noted that the terms "SET TEMP" and "SET POINT" are used interchangeably in this manual.

# 5.2 CALIBRATION PROCEDURES

# 5.2.1 GENERAL

This paragraph provides calibration procedures for the Controllers and tests for the Incubator.

Unless otherwise indicated, all calibration procedures are performed under the following conditions:

- 1. The Controller is removed from the incubator and the cover is removed.
- 2. The Controller is connected to a primary source of the correct voltage and frequency.
- Primary power applied to the Controller for a minimum of ten minutes before calibrating.

# **5.2.2 TEST EQUIPMENT REQUIRED**

The test equipment listed below is required for calibration of the Controller and performing Oxygen Concentration tests. Equivalent test equipment may be substituted.

- Probe Simulator, Part No. 68 900 80
- Logic Probe capable of +/-- 12 Vdc
- Variable Transformer, General Radio Model WSM T3AW
- Digital VOM, Fluke Model 8060A
  - Oxygen Analyzer, Sybron/Taylor Model QA580
  - Flowmeter, Victor Model 1099–0025
- Leakage Current Tester, Bio-Tek 501


# 5.2.3 PCB2 - MODEL C100

# **TEST SETUP**

- Connect the Simulator to the PATIENT PROBE and AUXILIARY PROBE jacks on the Side Panel of the Controller. Connect the ac line cord through a variac and turn on the unit. Set the variac as follows: 120 +/- 2V~ (110/120V Models); 240 +/- 2V~ (220/240V Models); 100 +/- 2V~ (100V Models).
- On the Controller, set the AIR and SKIN set Temp. switches to 36.0 °C. Set the CONTROL MODE switch
  to AIR.
- On the Simulator, set the MODE switch to AIR and the TEMP switch to 36 °C. Refer to Figure 5.1 for location of test points and adjustments.

# **PROCEDURE**

- Refer to Figure 5.1 and connect the DVM between TP20 (+) and TP22 on PCB2.
- 2. Adjust R35 on PCB2 for a reading of -350 +/- 50 mV on the DVM.
- On the Simulator, set the MODE switch to SKIN. Connect the DVM between TP13 (+) and TP22.
- Adjust R50 for a reading of -350 +/- 50 mV on the DVM.
- Turn off the POWER switch on the Controller. Connect the logic probe between +12 Vdc and ground.
   Monitor TP15 with the logic probe.
- Turn the unit on. Set the variac as follows: 95 +/- 2V~ (110/120V Models); 190 +/- 2V~ (220/240V Models); 80 +/- 2V~ (100V Models). On PCB2, turn R100 fully counterclockwise.
- 6a. On the simulator, set the mode switch to AIR.
- On the Controller, set the AIR SET TEMP Switch to 37 °C. Slowly turn R100 clockwise until the light on the logic probe just stays off constantly (full heater power).
- Set the variac as follows: 130 +/-2 VAC (110/120V Models); 260+/-2 VAC (220/240V Models); 108+/-2 VAC (100V Models). The light on the logic probe should be on for approximately 50 percent of the time.
- Set the variac as follows: 120 +/- 2V~ (110/120V Models); 240 +/- 2V~ (220/240V Models); 100 +/- 2V~ (100V Models). The light should go off for approximately four seconds (Heater On) and come on for approximately two seconds (Heater Off).
- 9. Turn off the Power. Remove the logic probe.

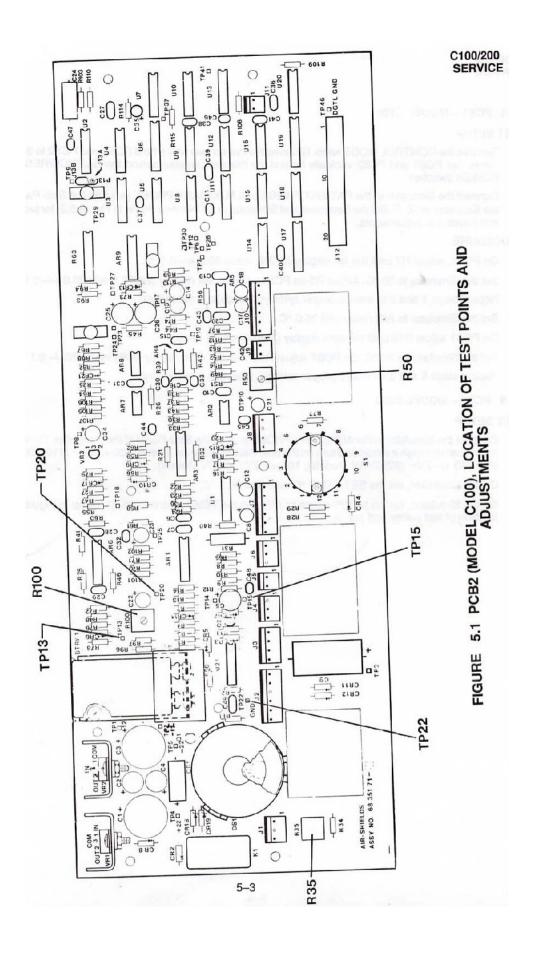

#### C100/200 SERVICE

# 5.2.4 PCB1 - MODEL C100

# **TEST SETUP**

- Remove the CONTROL MODE knob. Remove the five screws which hold PCB1 and PCB2 to the Front Panel. Set PCB1 and PCB2 vertically behind the brackets located behind the SILENCE/RESET and POWER switches.
- Connect the Simulator to the PATIENT PROBE and AUXILIARY PROBE jacks on the Side Panel. Set the Simulator to 36°C. Set the Controller and Simulator to SKIN mode. Refer to Figure 5.2, for location of test points and adjustments.

# **PROCEDURE**

- 1. On PCB1, adjust R7 until the left display (SKIN) reads 36.0 +/- 0.1 °C.
- 2. Set the Simulator to 20 °C. Adjust R2 on PCB1 until the left display (SKIN) reads 20.0 +/- 0.1 °C.
- Repeat steps 1 and 2 to ensure proper settings. Readjust if necessary.
- 4. Set the Simulator to AIR mode and 36.0 °C.
- 5. On PCB1 adjust R18 until the right display (AIR) reads 36 +/- 0.1 °C.
- Set the Simulator to 20 °C. On PCB1 adjust R13 until the right display (AIR) reads 20+/- 0.1 °C.
- Repeat steps 5 and 6 to ensure proper settings. Readjust if necessary.

#### 5.2.5 PCB2 - MODEL C200

#### **TEST SETUP**

- Connect the Simulator to the AUXILIARY PROBE jack on the Side Panel of the Controller. Connect the ac line cord through a variac and turn on the unit. Set the variac as follows: 120 +/-2V~ (110/120V Models); 240 +/- 2V~ (220/240V Models); 100 +/- 2V~ (100V Models).
- 2. On the Controller, set the SET TEMP °C switch to 36.0 °C.
- 3. On the Simulator, set the MODE switch to AIR and the TEMP switch to 36 °C. Refer to Figure 5.3 for location of test points and adjustments.

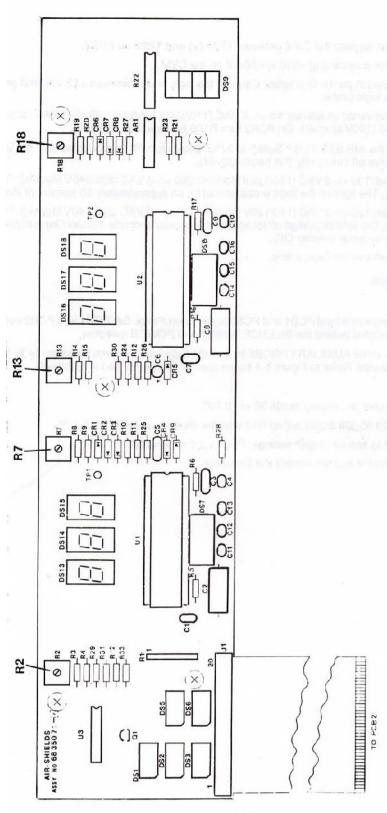


FIGURE 5.2 PCB1 (MODEL C100), LOCATION OF TEST POINTS AND ADJUSTMENTS

#### C100/200 SERVICE

# **PROCEDURE**

- 1. Refer to Figure 5.3 and connect the DVM between TP20 (+) and TP22 on PCB2.
- 2. Adjust R35 on PCB2 for a reading of -350 +/- 50mV on the DVM.
- Turn off the POWER switch on the Controller. Connect the logic probe between +12 Vdc and ground. Monitor TP15 with the logic probe.
- Turn the unit on. Set the variac as follows: 95 +/-2 VAC (110/120V Models); 190 +/-2 VAC (220/240V Models); 80 +/-2 VAC (100V Models). On PCB2 turn R100 fully counterclockwise.
- On the Controller, set the AIR SET TEMP Switch to 37°C. Slowly turn R100 clockwise until the light on the logic probe just stays off constantly (full heater power).
- Set the variac as follows: 130 +/-2 VAC (110/120V Models); 260 +/-2 VAC (220/240V Models); 108 +/2 VAC (100V Models). The light on the logic probe should be on approximately 50 percent of the time.
- Set the variac as follows: 120 +/- 2 VAC (110/120V Models); 240 +/- 2 VAC (220/240V Models); 100 +/2 VAC (100V Models). The light should go off for approximately four seconds (Heater On) and come on
  for approximately two seconds (Heater Off).
- Turn off the power. Remove the logic probe.

#### 5.2.6 PCB1 - MODEL C200

#### TEST SETUP

- Remove the five screws which hold PCB1 and PCB2 to the Front Panel. Set PCB1 and PCB2 vertically behind the brackets located behind the SILENCE/RESET and POWER switches.
- Connect the Simulator to the AUXILIARY PROBE jack on the Side Panel. Set the Simulator to 36°C. Set
  the Simulator to AIR mode. Refer to Figure 5.4 for location of test points and adjustments.

#### PROCEDURE

- On PCB1 adjust R18 until the display reads 36 +/- 0.1°C.
- 2. Set the Simulator to 20 °C. On PCB1 adjust R13 until the display reads 20 +/- 0.1 °C.
- 3. Repeat steps 1 and 2 to ensure proper settings. Readjust if necessary.
- 4. Reassemble the Controller and disconnect the Simulator.