




IR-200 BABY RESUSCITAIRES OPERATOR'S MANUAL

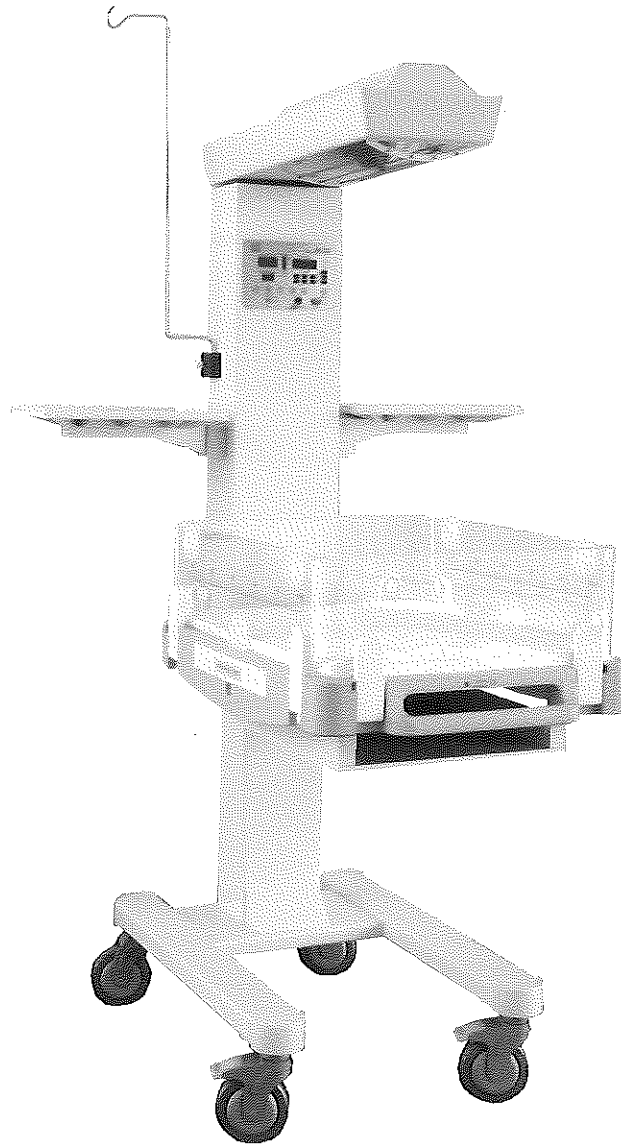

Con-Trex Medical Systems



WARRANTY

The product being described in this manual is warranted against defects in materials or workmanship for one year from the date of shipment, with the following exceptions.

1. All consumable and disposable products are guaranteed to be free from defects upon shipment only.

2. Calibrations are considered normal maintenance and are not included in the 1-year warranty.

During the warranty period any defective parts other than those listed above will be replaced at no charge to the customer.

This warranty is rendered void and our company cannot be held liable for conditions resultant therefrom if:

1. Damage to the unit is incurred as a result of mishandling.
2. The customer fails to maintain the unit in a proper manner.
3. The customer uses any parts, accessories, or fittings not specified or sold by our company.
4. Sale or service is performed by the non-certified service/dealer agency.

This warranty is in lieu of all other warranties, expressed or implied, and our company shall in no event be liable for incidental or consequential damages including loss of use, property damage, or personal injury resulting from breach of warranty.

The Accreditation Manual for Hospitals requires each piece of equipment to be tested prior to initial use and at least annually thereafter. To comply with this standard, we recommend that you participate in our accreditation Testing compliance Program during the warranty period. This service can be performed through our company and authorized dealers.

SERVICE

For optimal performance, product service should be performed only by authorized by our company and qualified service personnel. Please contact the local agency or the After-Sales of our company to get more technical information about maintenance.

OPERATING PRECAUTIONS

1. BABY RESUSCITAIRES (Warmer) belongs to high risk medical device which can endanger infant's life. Therefore please use the device only in operation room, neonate nursing room, pediatric intensive care unit or similar sickroom in hospital. Operator for the device should be special trained and operate the device under the instruction of medical practitioner.
2. The operator must keep observing the patient's condition while the device is working. Supervise and record baby's temperature regularly to check whether the temperature of the patient is over high/low or any other unusual conditions happen. Suggest monitoring the baby temperature at least 1 time every half an hour.
3. Please stop using the device when it failure or disfunction. Turn off the power and transfer the patient out from the device, then inform our company or our authorized agency for service. DO NOT ask for service from person who's not been authorized by our company.
4. Direct radiation from sunlight or other infrared source could cause overheating of the infant without activating the Over Temperature Alarm. DO NOT leave the WARMER in direct sunlight or near other sources of radiant heat.
5. DO NOT leave the WARMER in the presence of flammable anaesthetic gases or other flammable materials, such as some types of cleaning fluids.
6. DO NOT leave the WARMER in the presence of strong electromagnetic field. Portable and mobile RF communication devices may have an impact on this device.
7. Devices which are easily interfered by magnetic field should not be used near the WARMER because they may interfered by the WARMER.
8. The fast air movement can affect the thermal balance of the infant. Therefore, the WARMER should be placed in the room where the air movement rate is less than 0.3m/s.
9. Please DO NOT use the WARMER under working environment not stipulated in table 1.1, or else, it may cause the failure or the WARMER can not reach the requirements.
10. Check the panels regularly to examine whether these panels are installed firmly to avoid the infant falling on the floor.
11. When turn outside the panel, DO NOT make the infant uncared to prevent the baby fall of from the bassinet.
12. When operating the panel, pay attention not to touch any part of the infant avoid the harm on the skin of infant.
13. If the infant wears the clothes or is covered with the blanket, and it can affect the infrared radiation of infant. So we suggest that the infant should be naked.
14. When the bassinet tilts, some part of the patient is near the radiant heater so as to absorb more radiant heat, therefore, these parts should be checked regularly.
15. Please DO NOT touch the heater or its protective parts to avoid the scald.

16. Please DO NOT put anything on the top of WARMER, or it will damage the equipment or the risk of any security aspects.
17. To avoid overturning, please DO NOT move the WARMER breadthwise.
18. You need somebody with great strength to move the WARMER. The shake handhandle which located in the front of warmer can be used as mobile handle (This handle can not carry the whole machine).. Before moving, please pull out the power cords.
19. When using the device, the wheels should be locked tightly to prevent moving.
20. Please DO NOT keep the power switch on for a long time when the mains power is unconnected. Or else, it may waste the power of internal battery or damage the battery.
21. In nursing operation, the operator can not touch the other charged equipment at the same time, may bring shock hazard to patients
22. The fuse only can be replaced by authorized qualified maintenance personnel. Please cut off the power supply and do not touch the metal parts and patients at the same time before replacing the fuse according to the stipulated specification.
23. The warmer must be cleaned and sterilized for the first time for initial use, finish the operation for a baby or after used it for one week and there's dirt on the device. The detail clean/sterilize method please check the Section 5. The warmer super load of continuous use may accelerate all the components aging or increase the failure frequency, therefore, please stop using the equipment when it continue work for one week.
24. Must use neutral cleaning/disinfectant to clean. Other disinfectant (like alcohol) will destroy some parts of the warmer. Please follow the instruction for detergent usage to use.
25. After the warmer being cleaned by the combustible cleaning solvent, should be completely dry. The remaining a handful of the flammable solvents (such as ethyl ether, ethanol or similar cleaning solvent) can cause fire.
26. Please only use skin temperature sensor, rechargeable battery, power cord or other accessories provided by our company. Otherwise, it may reduce the safety and noise immunity of the equipment or increase the equipment lauch.
27. Damages will be easily caused if using the warmer after it reached its lifetime. Guideline and requirement for original capability cannot be reached as well, which requirement for disabled.
28. The lifetime for the baby resuscitaires is 8 years. The device, accessories and the packaging have to be disposed of waste correctly at the end of the usage. If you discard randomly, it will cause environment pollution. So please follow Local Ordinances or Regulations for disposal, or return to our company for disposal.

29. Generally the life period of rechargeable battery inside the baby resuscitaires is 3 years. Before using the product each time, should inspect the rechargeable battery according to maintenance requirements of 5.3. If it isn't getting through the inspection or the battery has been used for more than 3 years, the battery should be replaced. The replacement of the internal rechargeable battery required by authorized qualified service personnel.
30. The device should not be close to or use with other device. If have to, please observed to verify that in its use of configuration can run normally or not.
31. Using additional heating function of bassinet of radiant heater or using the jaundice treating function during the Heater in the use of radiation, may lead to patients over heated. This factor should be fully considered under such situation and the operator need to set the correct radiant heating function.

ELECTRICAL PRECAUTIONS

1. Using auxiliary equipment that does not accord with the safety requirements will reduce the safety performance of the WARMER. The following several points should be considered when choosing auxiliary equipment: Evidences should be shown that this auxiliary equipment have been check-out on safety according to adjusted national standards based on IEC60601-1, and authorized with safety certificate.
2. In order to avoid the risk of electric shock, the equipment should only be connected with the protective grounding grid. Do not operate the equipment if you have any doubt about the ground connection.
3. An electric shock hazard exists within the power pack when the electronics cover is removed. Servicing should be performed only by authorized and qualified service personnel.
4. Make sure the power supply meets the requirements which are listed on the electrical nameplate.
5. When stop using the warmer or maintain the warmer, in order to ensure the safety, please disconnect all power line.
6. When connect the auxiliary equipment to the medical device must comply with the standard of IEC or ISO (For example IEC60950 data processing equipment). And all the configuration must comply with the requirements of medical electrical system (See the chapter 16 of the IEC 60601-1). No matter who connect the auxiliary equipment to the medical system of the medical electrical equipment must comply with the requirements of medical system. They must focus on the local law, means the law takes precedence over the above requirements. If there is any question, please contact with local agent or technical service department.
7. For security reasons, the insulation way of the equipment and main power supply is power supply plug and socket.

SEASONAL SAFETY CHECK

1. Please clean the plug of power cord at least once a year. Too much dust on plug may cause the fire.
2. The skin temperature sensor should be calibrated every half year by authorized and qualified service personnel.

3. The following safety checks should be performed at least every 12 months by a qualified person who has adequate training, knowledge, and practical experience to perform these tests. The data should be recorded in an equipment log.

- ①. Inspect the equipment and accessories for mechanical and functional damage.
- ②. Inspect the safety relevant labels for legibility.
- ③. Inspect the fuse to verify compliance with rated current and breaking characteristics.
- ④. Verify that the device functions properly as described in the instructions for use.
- ⑤. Test the protection earth resistance according IEC 60601-1:2005: Limit 0.1 Ω .
- ⑥. Test the earth leakage current according IEC 60601-1:2005: Limit: NC less than 5mA, SFC less than 10mA.
- ⑦. Test the enclosure leakage current according to IEC 60601-1:2005: Limit: NC less than 100 μ A, SFC less than 500 μ A.
- ⑧. Test the patient leakage current according IEC 60601-1:2005: Limit: for AC less than 100 μ A, for DC less than 10 μ A.
- ⑨. Test the patient leakage current under single fault condition according IEC 60601-1:2005: Limit: for AC less than 500 μ A, for DC less than 50 μ A.
- ⑩. Test the patient leakage current under single fault condition (with mains voltage on the applied part) according IEC 60601-1:2005 less than 5000 μ A.
- ⑪. Test the patient auxiliary leakage current according IEC 60601-1:2005: Limit: NC for AC less than 100 μ A, for DC less than 10 μ A. SFC for AC less than 500 μ A, for DC less than 50 μ A.

TABLE OF DEFINITIONS AND SYMBOLS

TECHNICAL DEFINITIONS

SKIN TEMPERATURE SENSOR: A sensing device including the link with the equipment intended to measure the infant's baby temperature.

CONTROL TEMPERATURE: The temperature set at the temperature control.

PRE-WARM MODE: A mode of which can keep the mattress at a properly temperature. The heater output will work automatically according to the set programme.

MANUAL MODE: A mode of operation in which the heater output is either at a fixed level or a proportion of its maximum output set by the operator.

BABY MODE: A mode of operation in which the power output varies automatically in response to the temperature of the baby, to achieve a temperature close to a value set by the operator.

STEADY TEMPERATURE CONDITION: A condition which is reached when the temperature, measured

at the center of the TEST DEVICE positioned on the mid point of the EQUIPMENT mattress, does not vary by more than 1°C over a period of 1 hour.

TEMPERATURE ALARM CHECKOUT STATE: The difference between real temperature and control temperature is within $\pm 0.5^{\circ}\text{C}$ and such state lasts for over 10 minutes. The equipment must stay in such state when check up the alarm about temperature.

APGAR TIMER: It offers the functions of three periods alarming indication: 1min, 5min, and 10min for clinical treatment.

LIFETIME OF PRODUCT: The period from sell-by date to the date of discarding as useless.

NOTE, IMPORTANT, CAUTION AND WARNING

NOTE: A note is inserted in text to point out procedures or conditions, which may otherwise be misinterpreted or overlooked. A note may also be used to clarify apparently contradictory or confusing situations.

IMPORTANT: Similar to a Note but be used where greater emphasis is required.

CAUTION: A caution is inserted in text to call attention of a procedure which, If not followed exactly, can lead to damage or destruction of the equipment.

WARNING: A warning is inserted in text to call attention to dangerous or hazardous conditions inherent to the operation, cleaning, and maintenance of the equipment which may result in personal Injury or death of the operator or patient.

SYMBOLS






















| | | | |
|---|-------------------------------------|---|---|
|  | Refer to instruction manual |  | Non-ionizing radiation |
| CLASS I | Class I Equipment |  | Type BF applied part |
|  | On (Power: connection to the mains) |  | Off (Power: disconnection to the mains) |
|  | On (only for a part of equipment) |  | Off (only for a part of equipment) |
| F 4AH/250V | Type F Fuse 4AH/250V | 220-230V~/50Hz | Input power |
|  | High voltage |  | Heating Power Indicator |
| RS232 | Data communication connector |  | Weight limit |
|  | Silence /Reset key |  | Keypad lock key |
|  | Set up key |  | Set down key |
|  | Timer key |  | APGAR timer key |
|  | Calibration key |  | Mode select key |
|  | Serial Number |  | Date Of Manufacture |
|  | Caution, scald | | |

TABLE OF CONTENTS

| SECTION | PAGE |
|--|------|
| 1. GENERAL INTRODUCTION..... | 1-1 |
| 1.1 INTRODUCTION..... | 1-1 |
| 1.2 INTENDED USE..... | 1-1 |
| 1.3 PRODUCT CONTRAINDICATIONS..... | 1-1 |
| 1.4 COMPOSITION OF PRODUCTS..... | 1-1 |
| 1.5 DESCRIPTION..... | 1-1 |
| 1.6 SPECIFICATION..... | 1-3 |
| 2. INSTALLATION..... | 2-1 |
| 2.1 GENERAL..... | 2-1 |
| 2.2 UNPACKING..... | 2-1 |
| 2.3 INSTALLATION..... | 2-1 |
| 3. FUNCTION DESCRIPTION..... | 3-1 |
| 3.1 GENERAL FUNCTION DESCRIPTION..... | 3-1 |
| 3.2 TEMPERATURE CONTROL PRINCIPLE..... | 3-1 |
| 3.3 DATA COMMUNICATION CONNECTOR..... | 3-2 |
| 3.4 ALARMING AND SYSTEM INDICATION INFORMATION..... | 3-2 |
| 4. OPERATION..... | 4-1 |
| 4.1 GENERAL..... | 4-1 |
| 4.2 POWER SUPPLY CONNECTION AND SWITCH CONTROL | 4-1 |
| 4.3 CONTROLLERS, INDICAIORS..... | 4-1 |
| 4.4 OPERATION CHECKOUT PROCEDURE..... | 4-4 |
| 4.5 GENERAL OPERATION PROCEDURE..... | 4-8 |
| 5. CLEANING AND MAINTENANCE..... | 5-1 |
| 5.1 GENERAL..... | 5-1 |
| 5.2 CLEANING..... | 5-1 |
| 5.3 MAINTENANCE..... | 5-2 |
| 5.4 TROUBLESHOOTING..... | 5-3 |
| 6. PARTS LIST | 6-1 |

NOTE: The product's appearances maybe differ from the one in this manual, but it dose not affect the capability of product. Please understand if it brings you troubles.

SECTION 1

GENERAL INTRODUCTION

1.1 INTRODUCTION

This manual provides instructions for installation, debugging, operation, cleaning and maintenance of baby resuscitaires. We are not responsible for the malfunction which is caused due to not following the instruction on our manual.

The operator should read and understand of the content of this manual.

This manual should be put together with the device so as to the client to check at any moment.

1.2 INTENDED USE

The baby resuscitaires is a radiant warming; open type incubator intended to provide an optimum clinical environment for observation, examination, temperature regulation, and management of neonates.

1.3 PRODUCT CONTRAINDICATIONS


It is not clear now.

1.4 COMPOSITION OF PRODUCTS

The baby resuscitaires consists of five components: the warmer module, the bassinet, the main column, the mobile stand, and the controller. The sponge based mattress on the bassinet. The warmer module can be rotated in the range of $\pm 90^\circ$.


1.5 DESCRIPTION

The following diagram shows the main parts of the baby resuscitaires:

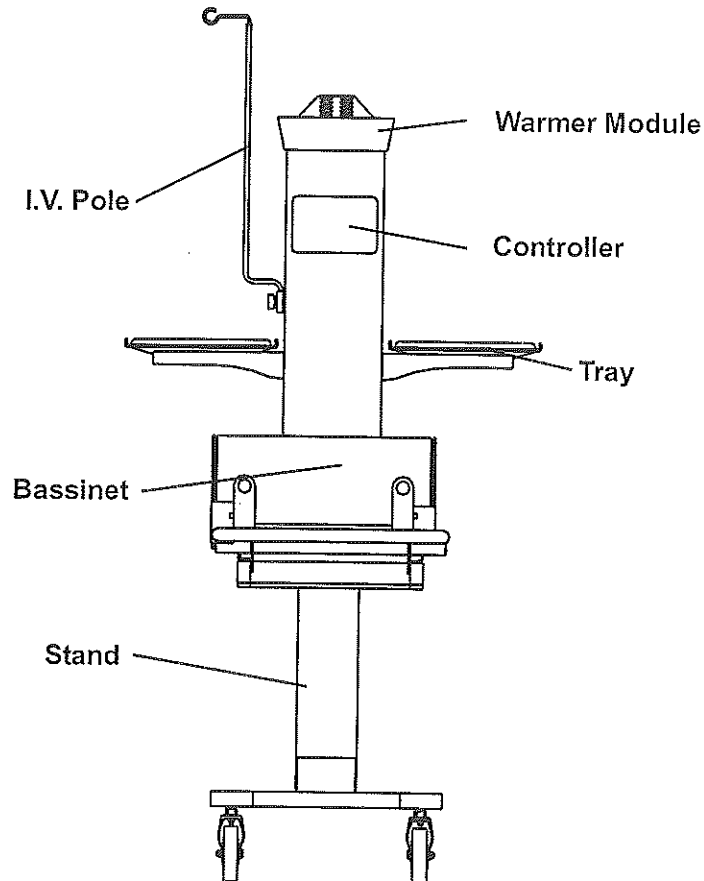

OPERATOR'S MANUAL FOR BABY RESUSCITAIRES

| DESCRIPTION OF PART | EXPLANATION |
|---------------------|--|
| Warmer Module | This main part is composed of heater, reflective cover and so on, it is intended to provide the radiation for electromagnetic spectrum infrared range with weight of 9Kg, and its angle can be adjusted horizontal in two ways. The lifetime of heater is 2000hrs. |
| I.V. Pole | A kind of bearing part, which is used for hanging the infusion bottle. Max. Load: 2Kg |
| Controller | The core part with 3 temperature control mode: pre-warm mode, manual mode, baby mode, APGAR timer, timing function, and it is used for automatic controlling of infrared radiation heat output, please refer to section 4. |
| Tray | A kind of bearing part, which is used for putting some small objects. Max. Load: 2 Kg |
| Bassinet | It is used for place the infant. The bassinet can be tilted. Max. Load: 10 Kg. This bassinet is equipped with 4pcs of panels to avoid the patient falling off. Size of mattress: L710mm×W520mm |
| Stand | A part which can support the main body of warmer. |

| | |
|---|---|
|  | <p>The maximum bearing weight of shelf and other accessories is described in the table. Please do not overload to avoid damages to accessories.</p> |
|---|---|

NOTE: Size of whole unit: L1075mm×W760 mm×H1840 mm

The distance from bed to the floor: 900mm

Weight: 75Kg

1.6 SPECIFICATION

This product's classification as follows:

By the electric shock protection type classification: Type I equipment.

By the degree of shock proof classification: Type BF application part

By the specified of IEC60529 for liquid protection degree classification: IPX0.

By the manufacturers recommended disinfection and sterilization method classification: Use neutral disinfection solvents or solution to clean.

By the air mixer of flammable gas or with oxygen or nitrous oxide mixture of flammable anaesthetic gas safety degree classification: It should not use in air mixer of flammable gas or with oxygen or nitrous oxide mixture of flammable anaesthetic gas.

By operational mode classification: Continuous operation.

Specifications for the baby resuscitaires are provided in table 1.1.

TABLE 1.1 SPECIFICATIONS

| | |
|--|---|
| Power Requirements..... | AC220V-230V/50Hz, 600VA |
| Maximum Heater Power Output..... | 540W/240V |
| Heater power display..... | 0 to 100%, adjustable in 10% increments |
| Heater modes..... | Pre-warm mode Manual mode Baby mode |
| Temperature Control range..... | 34.5°C~37.5°C |
| Baby Temperature display range..... | 5°C~65°C |
| Deviation between baby temperature and control temperature..... | ≤0.5°C |
| Accuracy of skin temperature sensor..... | ±0.2°C |
| Temperature uniformity of mattress..... | ≤2°C |
| ALARM (See section 3.4)..... | Power failure alarm Sensor failure alarm Deviation alarm Over temperature alarm Setting alarm Checking alarm |
| ENVIRONMENT TEMP (Not to use in the environment exceed specified) | |
| Operating Range..... | 18°C~30°C |
| Storage and transport range..... | -40°C~+55°C |

TABLE 1.1 SPECIFICATIONS (continued)

| | |
|---|--|
| ENVIRONMENT HUMIDITY | |
| Operating range..... | 30%RH~75%RH |
| Storage and transport range..... | ≤93%RH |
| Application environment altitude..... | ≤2000m |
| Overvoltage category..... | II |
| Pollution degree..... | 2 |
| ATMOSPHERE PRESSURE | |
| Storage and transport atmospheric pressure range..... | 500hPa~1060hPa |
| Working atmospheric pressure range..... | 800hPa ~1060hPa |
| AIR FLOW RATE | |
| Ambient air movement rate..... | <0.3m/s |
| OTHER SPECIFICATION | |
| Working noise..... | Ambient noise≤40dB(A), working noise≤50dB(A) |
| APGAR Timer..... | Audible and visible alarm when the device runs to 50"~1', 4'50"~5', 9'50"~10' |
| <p>NOTE: Changing the inside room air flow rate or the angle of declination of bassinet, or using the heating device beside this mode, may affect the relations among temperature uniformity of mattress, indicated temperature or baby temperature.</p> | |

SECTION 2 INSTALLATION

2.1 GENERAL

This section provides installing procedures about WARMER.

2.2 UNPACKING

Generally, the WARMER is usually packed to one carton. When taking out the equipment from the cartons, take care not to damage the spare parts of the WARMER.

2.3 INSTALLATION

At least two professionals do the installation of the WARMER with screwdriver and spanners.

Installation step:

A. Install the groupware of upper column (upper column + warmer module + controller)

① Screw off the bolt M5X20, Spring washer Φ 5, Flat washer Φ 5 and external teeth serrated lock washer Φ 5 fixed in the upper column with screwdriver.

② Insert the upper column groupware into the column as the direction indicated in figure 2.1, and fix them with the previous bolt M5X20, Spring washer Φ 5, Flat washer Φ 5 and external teeth serrated lock washer Φ 5. Then install the plywood into the upper column.



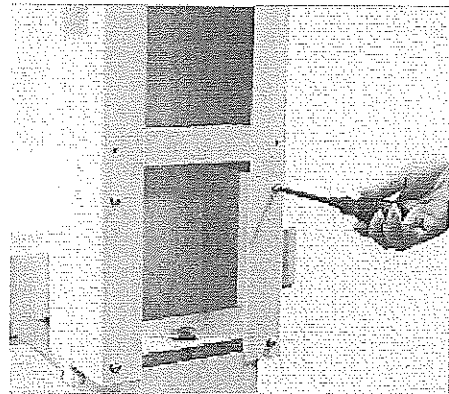


FIGURE 2.1

③ As the figure 2.2 shows, put the tray inside the bottom of the tray support fixing block as the direction of arrow, and then fix it with fixing bolt

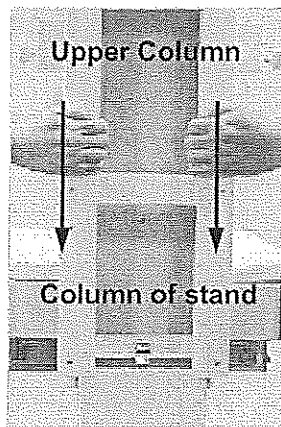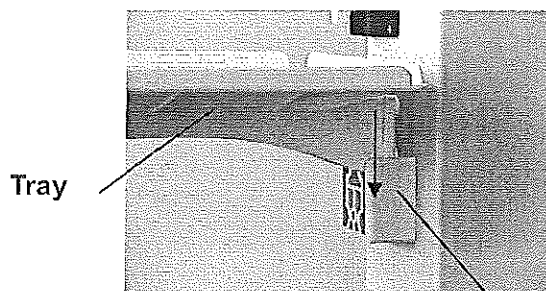

Tray support fixing block


Fixing bolt

FIGURE 2.2

IMPORTANT: Please make sure that the upper column and the stand are vertical, or else, it will affect the temperature uniformity on the mattress.

B. Install the panel

Insert the panel into the Fixed Patch as the arrow indicates in figure 2.3.1, turn it up and make sure it is vertical to the earth. Then press it down as the direction indicated in figure 2.3.2.

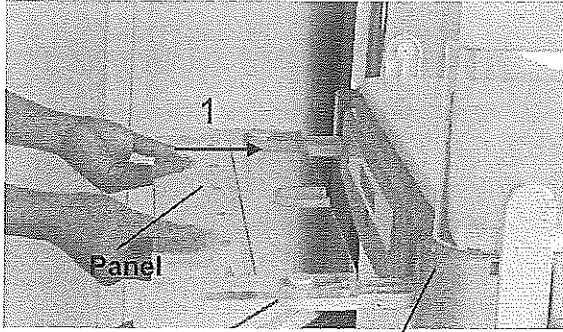

Fixed Seat For Panel

FIGURE 2.3.1

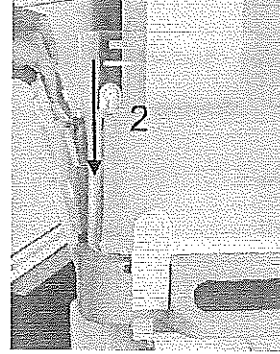


FIGURE 2.3.2

NOTE: 1. Four panels are in total, which with the corner bracket is the back panel.

2. Keep the bassinet slant when inserting the back panel.

C. Install the I.V. Pole

Insert the I.V. pole into the upper column and fix it with tightening clamp as figure 2.4 indicates.

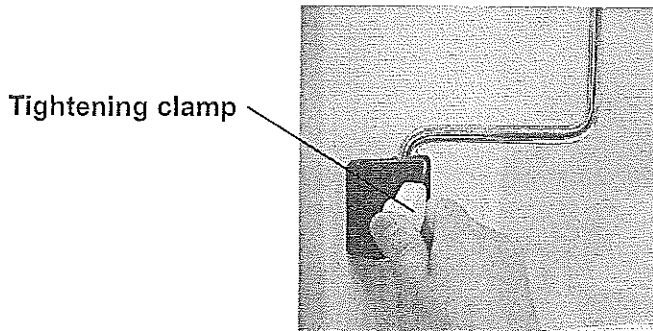


FIGURE 2.4

D. Insert the power cord

Insert the power cord of whole unit as indicates in figure 4.1.

Check the WARMER according to the instruction in section 4.4.

NOTE: The main power switch of the warmer is located on the back of the controller; do not place the equipment to where is hard to operate the power switch.

SECTION 3 FUNCTION DESCRIPTION

3.1 GENERAL FUNCTION DESCRIPTION

The baby resuscitaires adopts 3 kinds of control mode: Pre-warm mode, Manual mode and Baby mode. Once the device starts working, it can enter into the Pre-warm mode automatically.

The setting temperature and baby temperature can be indicated separately, and the skin temperature indication window can display the temperature of the skin sensor located.

Except for the listed parts in section 1.5, the warmer also has the lamp, X-ray tray and 4pcs wheels, two of them with brakes.

Heating output control under Pre-warm Mode: The output ratio of radiant module heater can work automatically according to the preconcerted procedure of warmer, please refer to the section 4.5.1.2.

Heating output control under Manual Mode: The output power of radiant module heater can work according to the settled heating ratio preconcerted set by operator, it isn't influenced of baby temperature, please refer to the section 4.5.2.1.

Heating output control under Baby Mode: Servo control the radiant module heater according to the baby temperature, please refer to the section 4.5.2.2.

3.2 TEMPERATURE CONTROL PRINCIPLE

See figure 3.1, the heat from the heater will radiate the surface of mattress through the reflective cover in shape of parabola with high reflectivity. Then the heat could reach to the infant.

In **Manual Mode**, the radiant heater outputs in the way of fixed proportion to make the body temperature of patient resume; in **Baby Mode**, the device will adjust the heat output proportion automatically by comparing the baby temperature and the set temperature to keep the heat balance.

NOTE: During the process of getting the radiation and heat, the losing heat in convection, evaporation, radiation, conduction will affect the heat balance. Therefore, to make the baby decrease the dissipation, it is necessary to use the device in the environment of no rapid air flowing ,and cover waterproof velum (polyethylene velum) the naked skin or to use the waterproof net to increase the humidity around the skin to decrease the water evaporation.

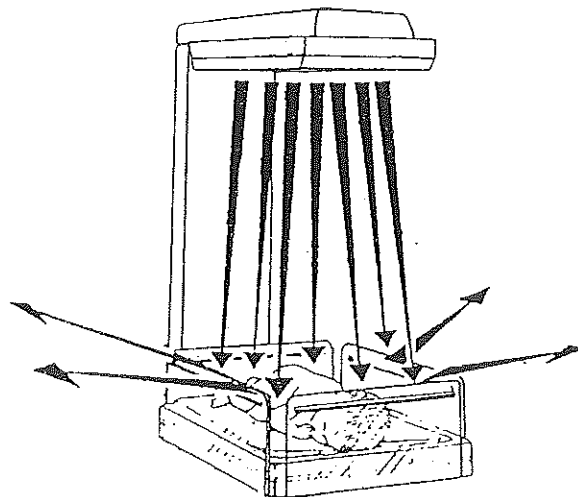


FIGURE 3.1 RADIATION PRINCIPLES

3.3 DATA COMMUNICATION CONNECTOR

This device is equipped with RS232 connector, which is used for data terminal output.



1. If connect the auxiliary equipment on this interface, the establishment or modification of the medical system in the its lifetime period should be evaluated according to requirements of the section 16 for IEC60601-1.
2. Everyone should be responsible for the safety of the whole system requirements.
3. Only the equipment provided by our company can be connected with RS232 data interface. When using, must ensure the reliable connection.
4. The service department should be responsible for the maintenance of data communication interface, and inspect the data communication every year.
5. The connection and using of the data communication must be performed by special trained medical personnel, and the personnel should clear and definite the risk of data communication.
6. Do not touch the data communication interface and the patients at the same time.
7. If have any question, please contact with the agency or the service department of our company.

3.4 ALARMING AND SYSTEM INDICATION INFORMATION

State

1. Alarm information

High priority: The most urgent information, red alarm light flashing, alarm sounds more than 65dB(A).

Five tones order alarm, ring twice, and every 2.5 seconds to repeat again

NOTE: The sound of power failure alarm is different from the other high priority alarm which sound source is a single buzzle.

Medium priority: Medium priority information, yellow alarm light flashing, alarm sounds more than 65dB(A).

Three tones order alarm, and every 7.5 seconds to repeat again.

2. The alarm preference is arranged according to the alarm serial number, the bigger the serial number is, the lower level is. When various failures appear, the alarm prompts according to the priority, the sound is different too.

Alarm introduction

| Alarm No. | Alarm information | Alarm character | Alarm activate condition | Control mode | The state of heater | Alarm level | Alarm delay time |
|-----------|--------------------------------------|---|---|--------------|---------------------|---------------|------------------|
| 1 | Power failure alarm | "Power" alarm light is on, red alarm light flashes, sound alarm start | Turn on the switch when no power supply | All | Off | High priority | <5s |
| 2 | Skin sensor failure alarm | "Sensor" alarm light is on, red alarm light flashes, set indicator shows "E01", sound alarm start | Short circuit, open circuit or bad connection occurs inside the skin temperature sensor | Baby | Off | High priority | <5s |
| 3 | Skin isolated sensor failure alarm | "Sensor" alarm light is on, red alarm light flashes, set indicator shows "E02", sound alarm start | Short circuit, open circuit or bad connection occurs inside the isolated temperature sensor | Baby | Off | High priority | <15s |
| 4 | Skin sensor difference failure alarm | "Sensor" alarm light is on, red alarm light flashes, set indicator shows "E03", sound alarm start | The difference between the main probe and isolated probe of skin sensor is over 0.8°C | Baby | Off | High priority | <50s |
| 5 | Over temp alarm | "Over" alarm light is on, red alarm light flashes, set indicator shows "E04", sound alarm start | The temperature measured by the skin temperature sensor is more than 38.5°C | Baby | Off | High priority | <10s |
| 6 | Alarm deviation | "H/L" alarm light is on, red alarm light flashes, set indicator shows "E05", sound alarm start | The displayed skin temperature is higher than set temperature 1°C | Baby | Off | High priority | <5s |
| | | "H/L" alarm light is on, red alarm light flashes, set indicator shows "E06", sound alarm start | The displayed skin temperature is lower than set temperature 1°C | Baby | On | High priority | <5s |

Alarm introduction (continued)

| Alarm No. | Alarm information | Alarm character | Alarm activate condition | Control mode | The state of heater | Alarm level | Alarm delay time |
|-----------|-------------------|--|--|--------------|---------------------|---------------|------------------|
| 7 | Set alarm | "SET" alarm light is on, red alarm light flashes, set indicator shows "E07", sound alarm start | The temperature measured by skin sensor is lower than set temperature 3.5°C above, and lasts for 2 mins. | Baby | Off | High priority | <2min |
| | | "SET" alarm light is on, red alarm light flashes, set indicator shows "E08", sound alarm start | When temperature stable state, if the temperature is out of the stable state over 0.4°C by accident or unreasonable action and do not back to the stable state in 3 mins and do not occur the deviation alarm. | Baby | Off | High priority | <3min |
| 8 | Check alarm | "CHECK" alarm light is on, red alarm light flashes, set indicator shows "E09", sound alarm start | Appears every 15 minutes | Manual | Off | High priority | <15min |

System failure alarm introduction

When system failure alarm occurs, the alarm light flashes, the set indicator shows the alarm code with the letter "H", and the alarm sound starts. The system failure alarm means the warmer can not work properly; the warmer should be stopped immediately, and should be repaired by the qualified maintenance personnel. The specific alarm delay time and the alarm activate condition, please see the service manual.

NOTE: 1. All the above alarms except the deviation alarm and skin over temperature alarm in baby mode are belong to physiological alarm status, the power failure alarm belongs to other alarm status, the others are all technology alarm status.

2. Except for the power failure alarm, the other alarms are all can silence by pressing silence/reset key, the time for silence is 4mins. When the silence time is over, if the alarm condition is still not solved, the alarm will have to activate. If occur multiple alarm at the same time, the device will give an alarm firstly for the higher grade. Press the twice of silence /reset key can cancel the alarm state then the equipment back to the set condition to monitor the alarm.

3. If checking alarm active, and the operator doesn't press the silence/reset key, the heater output will be limited to 30% automatically. This does not mean there is something wrong with the equipment, but for giving a hint that the operator should check and monitor the body temperature of patient.
4. The power failure alarm lasts at least 10 mins, when power supply recover before the alarm indication, the equipment will back to the setting before power failure alarm.
5. Alarm system will save the all the alarm logs automatically. When the equipment is outage, the saved log contents did not changed.

WARNING: When using the baby resuscitaires in any independent place, if use different alarm preset, there will be the potential risk.



SECTION 4 OPERATION

4.1 GENERAL

This section provides operating procedures for the baby resuscitair.

4.2 POWER SUPPLY CONNECTION AND SWITCH CONTROL

Power supply socket and general power switch on the back of temperature controller are presented in figure 4.1.

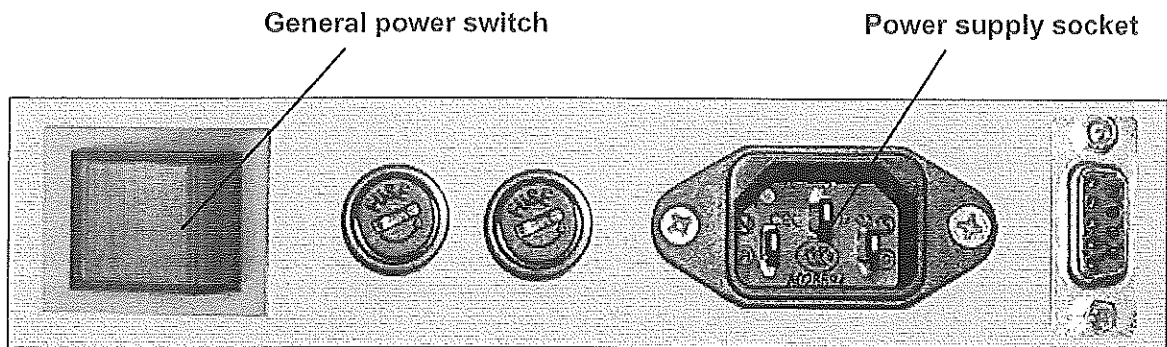


FIGURE 4.1

4.3 CONTROLLERS, INDICAIORS

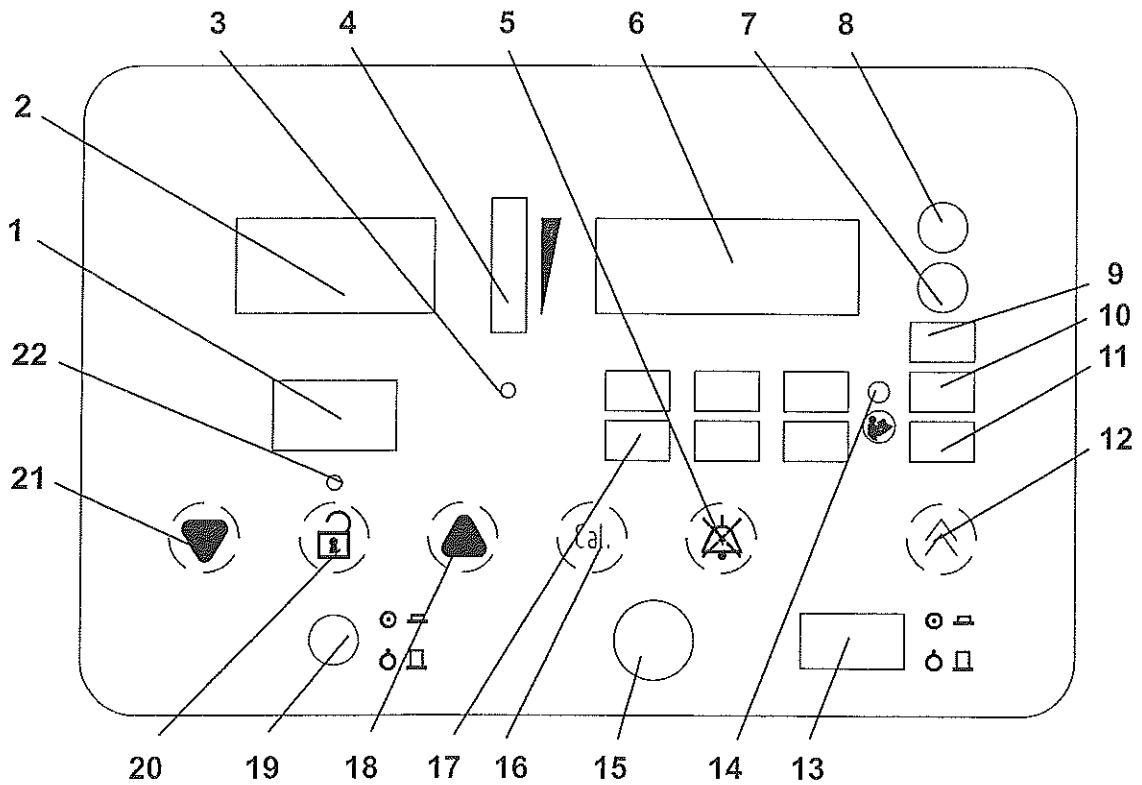


FIGURE 4.2

1. Set temperature indicator

Indicates the set temperature value in baby mode; while it can indicate "--.°" in the pre-warm mode and the manual mode; it can indicate the alarm code when alarm activated.

2. Skin temperature indicator

Display the temperature where the skin temperature sensor is placed.

3. Battery condition indication light

It will show the condition of the electricity, and the yellow light means it is charging, while the green one means it is full. The temperature control will check the condition of the battery during warmer working and charge and discharge automatically.

4. Heater power indicator

Indicate the heater output proportion.

5. 

When it occurs alarm prompt, press this key can cancel the alarm, press twice can reset the alarm state then the equipment back to the set condition to monitor the alarm.

6. Time display indicator

Under the APGAR timer state, the time unit is second. While under the timer state, the unit is minute.

7. Timer key

Press this key to enter into the timer state.

8. APGAR Timer key

Press this key to enter into the state of APGAR timer.

9. Pre-warm mode indication light

This light is on when it is in the Pre-warm mode.

10. Manual mode indication light

This light is on when it is in the Manual mode.

11. Baby mode indication light

This light is on when it is in the Baby mode.



In the setting state, press this key to select the Pre-warm mode, Manual mode and the Baby mode respectively.

13. The power switch of controller

Turn on or turn off the controller.

14. Alarm indication light

 
When device failure, the light is on.



When the light is on, please stop using and consult the alarm information of section 3.4 and relevant content of system indication information of the operator's manual.

15. Skin temperature sensor socket.

It is use for connecting the skin temperature sensor.



This key is only for the authorized and qualified service personnel to regular checking and calibrate the accuracy of skin temperature sensor, other people should not use this key.

CAUTION: Please do not press this key in normal operation.

17. Alarm classification indicator

 
If the alarm actived, the relative light is on.



In the setting state, press this key to increase the setting temperature to increase the heat power output ratio. Press this key constantly to speed the increasing temperature.

19. The power switch of illumination lamp

It is use for turning on or off the lamp.



Press this key, can activate and lock each function key.



Under setting state, press this key to decrease the set temperature or output ratio of heating power. Press this key constantly to speed the decreasing temperature.

22. Keypad lock indication light

If the light is on, that is to say the setting state is opened, you can operate all keys; while if the light is off, that is to say the setting state is closed, all setting is locked.(Note: The state of setting indication light has nothing to do with the APGAR and timer)

4.4 OPERATION CHECKOUT PROCEDURE

WARNING: 1. Once some function of the device lost or the front panel or other correlative devices have faults, please stop using it.

2. Set temperature must be high 3°C than ambient temperature. And then you can proceed this checkout procedure.

Baby resuscitaires should be only operated by trained personnel which knows familiar about the general risk of operating the baby resuscitaires and under the instructions of medical practitioner.

Before using you should proceed the following checking procedure each time.

The operator should operate the device within 20cm ahead, the specific distance depends on the comfort when operating.

4.4.1 CHECK THE INTEGRITY OF WARMER

- Make sure that the device has been sterilized;
- Make sure that the panels are locked firmly;
- Make sure that the panels is no crack or the sharp edge;
- Make sure that the tilt angle of bed can work properly ;
- Make sure that the needed accessories and other devices are available;
- Make sure that the power cord is connected and is safe, putting it on the panel is forbidden.
- Make sure that the wheels are installed well.

Check whether the caster can drop when lifting the baby resuscitaires 2cm above the ground. The drop of the caster will cause danger during transporting. Before replacing the loose casters, please do not use the baby resuscitaires.

4.4.2 CHECK CONTROLLER

WARNING

1. In order to avoid the electric shock, the device only can be connected with the power grid which has protective grounding.

2. Make sure that the building power sources are compatible with the electrical specifications show on the baby resuscitaires, for proper grounding reliability, Do not use extension cords.

A. START-UP THE CONTROLLER

When turn on the switch of the main power supply and controller, the controller performs a long period sound "ringing" .All indicators are on, at this time, the device can self-check automatically for 5s. And then, the set temperature can indicate the waiting state(--.-), at the same time, the skin temperature indicates the baby temperature (if the skin temperature sensor has been connected), and the time indicates the current time, and the controller can enter into the **Pre-warm Mode** automatically, and the pre-warm light will be on. If self-check failed or no sound, please repair the baby resuscitaires.

B. CHECK POWER FAILURE ALARM

Pull off the power cord of whole unit, the Power failure alarm should be activated, the device gives continuous alarm sound, "POWER" alarm light is on.

This operation is used for checking if the power failure is normal. Insert the power cord again after finishing checking.

IMPORTANT: Make sure that the rechargeable battery is full before usage. If not full, it may cause the power failure without the alarming indication. If full, and there is no any indication when cut off the main power supply, the warmer should be repaired by the qualified service personnel.

C. CHECK HEATER

Control the environment temperature at 21°C ~ 25°C, and set the setting value at 33.0°C, all the heat power indicator are on and indicator heater should power output completely.

NOTE: When the baby resuscitaires works under the set state, and continue the following operation procedure.

D. CHECK APGAR TIMER

When the controller is under the normal working state, press the key APGAR, the timer can indicate from 0s, when the time indicates 50"~1', 4'50"~5', 9'50"~10', it can sound "du...", at the same time, the time for APGAR is flashing.

E. CHECK THE FUNCTION OF TIMING

Under the normal working condition, press the **Timer key**, and it will indicate the current time, If the indicated time is not accurate, please reset it, and the specific setting method is as follows:

Press the **Timer key**, at the same time, turn on the controller for 3s, loosen the key when the indicated setting interface appears.

At this time, the set temperature window indicates the setting code, skin temperature window will indicate the relevant value(as for setting code, setting item and setting range, please refer to the following table), the time display window will indicates P002 (it means it has entered into the setting interface). Operator can choose the setting items by pressing the **Timer key**, or **APGAR key**, and press the **Up key** and **Low key** to choose the data setting. After finishing the setting of each item, press the **Keypad lock key** to store the setting value, or you can press the **Silence/Reset key** to store and exit after finishing setting procedure. If turn off the power supply without press the **Silence/Reset key**, and the setting is invalid, and system will store the previous setting value.


TIMING SET CODE

| SETTING CODE | INDICATED ITEM | SET RANGE |
|--------------|-------------------------------|------------------------|
| 001 | The former two figure of year | 19 ~20 |
| 002 | The latter two figure of year | 00 ~99 |
| 003 | month | 01 ~12 |
| 004 | date | 01 ~31 |
| 005 | week | 01~07 (01means Sunday) |
| 006 | hour | 00~23(24hrs) |
| 007 | minute | 00~59 |
| 008 | second | 00~59 |

F. CHECK "SENSOR" FAILURE ALARM

Pull off the skin temperature sensor in **Baby Mode**, The device should give a high priority alarm sound. **Set Temperature** indicator should be showed alarm code E01. The alarm character should be consistent with the description of section 3.4.

Opening

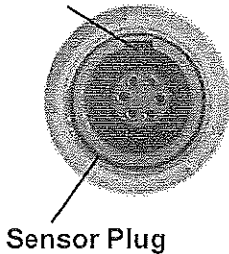


Sensor Plug



Arrow



When insert the sensor, make sure the arrow sign upwards and insert the sensor base vertically.

- 
 1. Insert or pull out the skin sensor, you must hold the plug of skin sensor, pulling the leads is forbidden.
 2. Please do not bend the connection of sensor.

G. CHECK "SET" ALARM

In **Baby Mode**, put the skin sensor into the water cup at temperature lower 3.5°C than the set temperature for 2min, the device should give a high priority alarm sound. **Set Temperature** indicator should be showed alarm code E07. The alarm character should be consistent with the description of section 3.4.

Set the temperature at 36°C, after the device enters into the **TEMPERATURE ALARM CHECKOUT STATE**, put the skin sensor into the water cup at temperature 35.3°C±0.1°C for 3min, the device should give a high priority alarm sound. **Set Temperature** indicator should be showed alarm code E08. The alarm character should be consistent with the description of section 3.4.

H. CHECK "H/L" ALARM

In **Baby Mode**, set the temperature to 35.0°C. Enter **TEMPERATURE ALARM CHECKOUT STATE**, put the skin sensor into the water cup at 37°C. When the temperature indication is more than 36.1°C, the device should give a high priority alarm sound. **Set Temperature** indicator should be showed alarm code E05; The alarm character should be consistent with the description of section 3.4. Set the temperature at 35.0°C, after the device enters into the **TEMPERATURE ALARM CHECKOUT STATE**, put the skin sensor into the water cup at temperature 33°C, when the temperature indication is lower than 33.9°C, the device should give a high priority alarm sound. **Set Temperature** indicator should be showed alarm code E06. The alarm character should be consistent with the description of section 3.4.

NOTE: If the system can not enter into **TEMPERATURE ALARM CHECKOUT STATE** or the real temperature can not changed to have the differences of more than ±1°C of the setting temperature, the alarm can not occur.

I. CHECK "OVER" ALARM


In **Baby Mode**, put the skin sensor into the water cups at 39.5°C±0.5°C, the over-temperature alarm should active. the device should give a high priority alarm sound. **Set Temperature** indicator should be showed alarm code E04. The alarm character should be consistent with the description of section 3.4.

J. CHECK "CHECK" ALARM

In **Manual Mode**, set the heater output proportion at 50%, after 15min, "CHECK". **Set Temperature** indicator should be showed alarm code E09. The device should give a high priority alarm sound; the alarm character should be consistent with the description of section 3.4.

4.4.3 OPERATIONAL CHECK OF OTHER FUNCTION

A. CHECK BED TILT

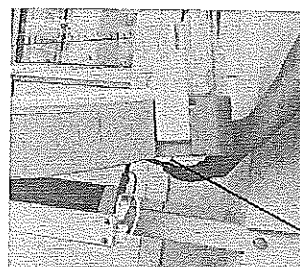

Angle adjustment handle

Pull the angle adjustment handle as the figure indicates to adjust the bassinet tilt.

B. CHECK THE ADJUSTMENT FUNCTION OF ANGLE OF HEATER HEAD

Pull the handle for lock downward, you can rotate the heater head at horizon angle.

NOTE: But only the 0° handle for lock is stable, the heat of the bed is also even.

C. CHECK ILLUMINATION LIGHT

Turn on the power switch of illumination light and the lamp will be on.

D. CHECK THE PANEL

Push and pull the panel and check if the panels are firm or not.

E. CHECK X-RAY TRAY



Push the X-ray tray in figure to check whether it can work well or not.

F. CHECK I.V. POLE AND TRAY

Check if the I.V. Pole and tray are tightening or not.

4.5 GENERAL OPERATION PROCEDURE

WARNING

1. Please read this operator's manual carefully before use.
2. You should not use the warmer without the checkout procedure; moreover, it needs to be lifted to the authorized and qualified service personnel to repair it.
3. To make the warmer work normally, the set temperature must be higher 3°C than ambient temperature.
4. The temperature display module of the controller is sensitive to the electromagnetic interference, so it can not be used in the high electromagnetic field intensity occasions. If the device which can send and receive small-signal is installed near this equipment, it may be affected by the electromagnetic wave sent by this equipment. Before using it, please check the devices around are been affected or not.

4.5.1 PREPARATION BEFORE OPERATION

4.5.1.1 Connect the power supply cord and skin temperature sensor correctly.

4.5.1.2 Pre-warm the warmer, put the patient on the bassinet after the mattress temperature reaches the stable temperature to avoid the body temperature of the naked baby decreasing quickly. Transfer to manual mode or baby mode immediately when put the baby into the equipment.

This equipment has the **Pre-warm Mode**, after the start-up system works, the device will enter into the following **Pre-warm Mode** without pressing any key:

The system will output the heat according to the set procedure, after a while, the system will output the heat at 30% (Radiation heating power output $\leq 10\text{mW/cm}^2$) to keep the mattress temperature until the mode changes. During the process of pre-warm, the **Set Temperature** window indicates "--.-", **Skin Temperature** indicates displays the real temperature.

We suggest the operator keep the warmer work at least 30min under the **Pre-warm Mode**.

4.5.2 OPERATION

4.5.2.1 MANUAL MODE

In **Manual Mode**, baby resuscitaires will output a fixed heating radiant quantity according to the set heat rate. This mode is just for giving the patient the short treatment and the first aid or make the lower temperature patient under the normal baby temperature.

NOTE: The operator should select and adjust the heating output percentage according to the environment temperature and the clinical operation requirement.

WARNING

1. Operator should not leave the baby non-care.
2. Measure the body temperature of baby regularly.

The heat output of system is 30% (the heating state indication is displayed with three grades). Under the setting state, the operator can adjust the heat output setting in the range of 0%-100% via upper or lower key, when the heating ratio output is $> 30\%$, the warmer can give alarming every 15min with alarming light is on, press the **Silence/Reset key**, and then the alarming will be stopped, the warmer can also operate according to the current working mode and the output power; When "**CHECK**" alarm activated, if the operator doesn't press any key, to ensure the safety of patient, after 1min, the system will limit the heating output to 30%.

NOTE: 1. In **Manual Mode**, the heating output power is fixed, without the control by the baby temperature. Therefore, pay attention to the change of body temperature of patient.
2. It will alarm every 15min to cause the attention of operator that the patient is in the dangerous environment, to ensure the safety, the operator must monitor the body temperature of patient.

4.5.2.2 BABY MODE

The **Baby Mode** is a kind of mode that the baby temperature can maintain under the setting temperature value. In this mode, the system can adjust the output of infrared radiation according to the

differences between the baby temperature and the setting temperature to maintain the heat balance of patient. This mode is intended to use for maintaining the body temperature of the patient. Skin temperature sensor is the applied part.

Considering that the **Manual Mode** can output the heat of infrared radiation according to the heat rate, cannot be adjusted of the real condition of patient, if continue to output the heat of infrared radiation in this mode, it will cause the patient over-heat, therefore, **to make sure the safety of patient, please use Body Mode.**

NOTE: The patient is in the state of shock or have a fever, please do not use this mode.

Please do not use the **Baby Mode** when the patient is in the state of shock, because the baby temperature is much lower than the normal temperature during shock, or else, the patient will be over-heat.

Please do not use the **Baby Mode** when the patient has a fever, because the baby temperature is much higher than the normal temperature during fever, or else, it will cause the body temperature of the patient decrease.

For the patient's temperature, usually, the operators think it means the rectum temperature, which is measured by putting the thermometer into the rectum of patient. To measure the core temperature of patient accurately, the operator needs to insert the thermometer in to the rectum at depth of 5cm, so it will be dangerous (the struggle of patient will cause the crack of thermometer), if the insert depth is not enough or time is not long, the operator can not get the real body temperature of patient, therefore, it is improper to control the output of heater via rectum temperature.

CONNECT THE PROBE OF SKIN TEMPERATURE SENSOR TO THE PATIENT:

In the **Baby Mode**, make sure that the probe of skin sensor is attached closely on the skin of patient. Put the probe on the right position of skin, the skin should be cleaned by alcohol or warm water, eliminate the oil and dirt, and make it dry. If the patient lies on back, please stick the metal surface of skin sensor probe between the xiphoid of the belly and the bellybutton, to avoid the liver; if the patient bends over, stick the metal surface of skin sensor probe on the back of patient, the best place is on the kidney. To make sure that the probe and the skin of patient is attached closely, please fix it with medical staple. (the disposable skin sensor can be fixed by the gum itself) If the patient lies on back, as for the position of probe, please follow the instruction of doctor.

NOTE: 1. The skin temperature sensor only can be used after disinfection.

2. Make sure that the probe of sensor attached the skin with the metal part.

3. Skin sensor probe can not be regarded as the rectum thermometer.

WARNING

1. Make sure that the probe of skin sensor is attached closely on the skin of patient. If the probe falls off the patient, the measured temperature from sensor is not the real baby temperature, maybe the air temperature or the mattress temperature, and it may cause the patient receive more heat or lose heat, even scald or death.
2. Please do not cover the blanket or diaper on the probe of skin sensor, because it will affect the accuracy of temperature.
3. The equipment cannot differentiate between an increase in core temperature with a cold skin (fever) and a low core and skin temperature (hypothermia). Skin sensor will measure the baby temperature of patient, not the real body temperature. Therefore, measure the body temperature regularly, and check whether the patient has a fever or not, whether the temperature of patient decreases.

CHOICE OF BABY TEMPERATURE CONTROL VALUE:

In the setting state, operator can adjust the baby temperature via pressing the upper and lower key.

NOTE: The operator should choose the baby temperature according to the clinical condition.

WARNING

1. In Baby Mode, it is servo-control baby temperature, the operator should not leave to avoid the patient is non-cared and cause the patient danger.
2. The patient maybe not feel the loss of water under the continuing heat radiation, so please add the water to patient to avoid the patient dehydration.

4.5.3 OTHER OPERATIONS

A. Raise the head or foot of patient

Please raise the head or foot of patient according to the step A in section 4.4.3.

CAUTION: 1. Please do not add the over load on the mattress.

2. The mattress tilt will affect the temperature uniformity on the mattress, the horizontal position of mattress is best state.

B. X-ray tray

According to step B in section 4.4.3, move away the warmer module to process the x-ray tray for the patient.

NOTE: Please try to shorten the time of moving the warmer module. The patient on the mattress will lose heat rapidly because there is no infrared radiation compensation when moving away the warmer module.

4.5.4 SHUTDOWN

After finishing the operation, turn off the power switch of controller, lighting switch and main power switch, and disconnect the wire of power.



SECTION 5

CLEANING AND MAINTENANCE

5.1 GENERAL

The section provides cleaning and maintenance instructions.

5.2 CLEANING

WARNING: Please cut off the main power connection and turn off all switches before cleaning and maintenance.

This device must be cleaned and sterilized for the first time after purchasing, or it is used for one week.

5.2.1 DISASSEMBLY BEFORE CLEANING

- A. Take out the skin temperature sensor from the controller.
- B. Take out the mattress from the bassinet.
- C. Please disassemble the panel from the bassinet according to the contrary sequence as the step B of 2.3 in section 2. Then remove the soft tubings from the panel.
- D. Pull the X-Ray tray out from the bassinet.

5.2.2 CLEANING PROCEDURE

CAUTION: Some chemical cleaning agents may be conductive and/or leave a residue which may permit a build-up of dust or dirt which may be conductive. Do not permit cleaning agents to contact electrical components. Do not spray cleaning solutions onto any of those surfaces.

- A. Clean the skin temperature sensor.

Use neutral disinfectant-detergent to thoroughly clean all surfaces (including the probe); then disinfect it with neutral disinfectant or ultraviolet.

CAUTION: 1. Do not put the sensor into the disinfectant-detergent. The disposable skin temperature sensor is only for the same patient's use, after using it, please discard.
2. skin temperature sensor suggest to be changed every two years, to avoid the damage of sensor surface and strong impact for long-time use and disinfection

- B. Clean the mattress

Scrub the bedspread with the neutral disinfectant-detergent. After washing in the clean water, then make it dry. Thoroughly clean all surfaces of the mattress; then dry with a clean cloth or paper towel.

- C. Clean the panel

NOTE: Alcohol can cause crazing of the clear Acrylic panel. Do not use alcohol, acetone, or any organic solvents for cleaning. Do not expose the panel assembly to direct ultraviolet radiation.

Use neutral disinfectant-detergent to thoroughly clean all surfaces; then dry with a clean cloth or paper towel.

D. Clean the X-Ray tray

Use neutral disinfectant-detergent to thoroughly clean all surfaces; then dry with a clean cloth or paper towel.

E. Clean the soft tubing, bassinet, tray and the I.V pole

Use neutral disinfectant-detergent to thoroughly clean all surfaces; then dry with a clean cloth or paper towel.

F. Clean the surface of the device.

Use neutral disinfectant-detergent to thoroughly clean all surfaces; then dry with a clean cloth or paper towel.

NOTE: You should wait for the heater head became cooling completely, then the surface of it can be cleaned.

CAUTION: 1. Please avoid the liquor flowed into the device during cleaning.

2. The reflect cover is an important parts which used to reflect the infrared radiation heater to the mattress. It is easy to damage and you must be very careful to clean it to prevent damaging it, or change the shape of it.

5.2.3 ASSEMBLE AFTER CLEANING

NOTE: Before install the parts onto the baby resuscitaires, please check each parts carefully and To see whether there is any broken. If there is any broken, it should be replaced immediately.

A. Insert the X-Ray tray into the bassinet.

B. Please assemble the panel into the bassinet according to the step B of 2.3 in section 2.

NOTE: The soft tubings must be put back before installing the panel. The opening of soft tubings should be outward.

C. Put the mattress back to the bassinet.

D. Put the skin temperature sensor into the sensor socket of Figure 4.2.

5.3 MAINTENANCE

| |
|--|
| <p>WARNING: To ensure the safety of using the equipment is not affected, the modified of baby resuscitaires is forbidden.</p> |
|--|

5.3.1 RECHARGEABLE BATTERY MAINTENANCE.

Please check the condition of the build-in rechargeable battery before the first use of device or in the alternation of device using.

A. Operate the unit for a period of 12 to 24 hours.

B. Trigger a power failure alarm by disconnecting the AC power cord.

C. The power failure alarm should activate and continue to alarm for at least 10 minutes.

D. Reconnect the unit to the AC line and recharge the battery.

If the power failure alarm cannot last more than 10 minutes, please replace the rechargeable battery. For this battery, it should be replaced by authorized and qualified service personnel.

NOTE: The replaced rechargeable battery will affect the environment if discard, so need to be recover according to the regulations.

5.3.2 HEATER'S REPLACE

In order to ensure the effect of the infrared radiant, when the heater passes the lifetime, it must be replaced although it can work normally. The reason is:

The electromagnetism spectrum infrared radiance of the heater will be reduced with the working time passing. Then the device will not achieve the standard as graph 1.1 in this manual. Thereby it is lack of the effect when the doctor uses it to keep warm to the patient.

For the heater's replacing, it should be replaced by authorized and qualified service personnel.

5.4 TROUBLESHOOTING

Troubleshooting of the baby resuscitaires is presented in the following table. If the fault cannot be localized from the table, the unit should be removed from service and servicing should be referred to our company or authorized and qualified service personnel.

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|---|--|--|
| No display on the screen | The switch is not turned on | Turn on the switch of power supply |
| Power failure alarm | Power switch is cut off | Turn off the switch of power supply |
| | Non-connection of power cord | Connect the power cord |
| Sensor failure alarm, alarm code E01 | Skin temperature sensor is not inserted | Insert the skin sensor |
| | Skin temperature sensor is damaged | Replace the skin sensor |
| Sensor failure alarm, alarm code E02 | Skin temperature sensor is damaged | Replace the skin sensor |
| Sensor failure alarm, alarm code E03 | Skin temperature sensor is inaccurate | Replace the skin sensor |
| Over-temp alarm, alarm code E04 | The patient has a fever | Check the patient |
| Deviation alarm, alarm code E05 | The ambient temperature changes a lot | Check the ambient |
| | The skin temperature sensor is not put on the patient's body and fall down the bassinet | Check the place of skin sensor |
| | The baby temperature of the patient hoists a lot | Check the patient |
| Deviation alarm, alarm code E06 | The ambient temperature changes a lot | Check the ambient |
| | The skin temperature sensor is not put on the patient's body and fall out of the bassinet | Check the place of skin sensor |
| | The baby temperature of the patient reduced a lot | Check the patient |
| Setting alarm, alarm code E07 | Skin temperature sensor is not on the patient, e.g. it is put out of the bassinet | Put the skin temperature sensor onto the patient |
| | Make the mistake of the temperature mode, e.g. use the baby mode to warmer the low- baby temperature patient | Choose the manual mode |
| Setting alarm, alarm code E08 | Skin temperature sensor is fell down from the patient | Put the skin temperature sensor onto the patient |

SECTION 6

PARTS LIST

This section provides the lists of accessories and removable parts of the baby resuscitaires. The users only can use the materials provided by our company, or will reduce the safety of equipments.

| No. | Name of parts | Serial number |
|-----|------------------------------------|---------------------|
| 1 | Skin temperature sensor | 88.06.005.01 |
| | Disposable skin temperature sensor | 88.08.005.00 |
| 2 | Power line | 86.46.020.00 |
| 3 | Tray | 23.38.016.02S |
| 4 | Mattress | 22.03.014.02 |
| 5 | I.V. pole | 23.11.001.00S |
| 6 | Organic glass panel | Front: 22.03.002.02 |
| | | Back: 22.03.027.03 |
| | | Left: 22.50.003.03 |
| | | Right: 22.50.004.03 |
| 7 | Rechargeable battery | 86.60.012.00 |
| 8 | Heater of warmer module | 22.14.041.01 |